 



# Quick Start Guide RW80L



Printer

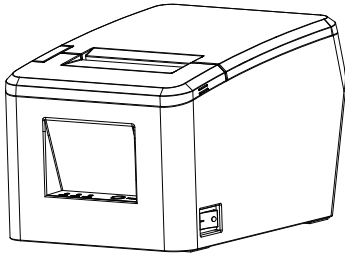

USB Cable



Power Cord



Power Adapter



Serial Cable



Quick Start Guide



CD




Roll Paper

### ⚠️ Notes:


1. Items in the package are dependent on the actual order.
2. The power adapter and power cord vary by region.

## Appearance


### ■ Front

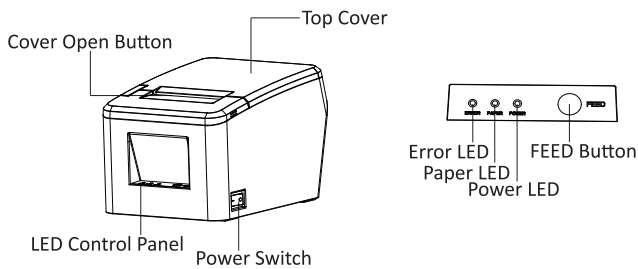

### ■ Back

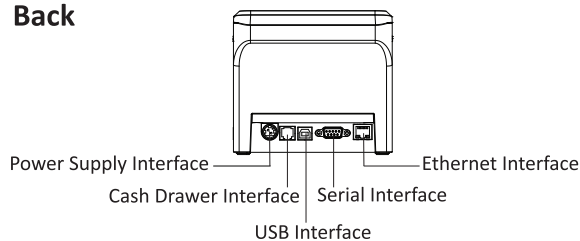


### ■ Opening Top Cover


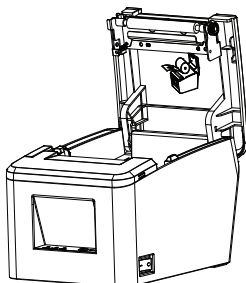


## Paper Loading


1. Press the cover open button to open the top cover.
2. Remove the used roll paper core, if any.

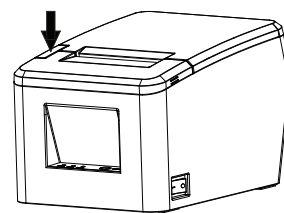

 
3. In the correct direction of the roll paper, install the roll paper.

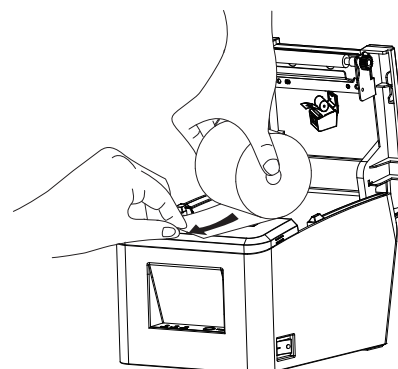

3. Pull out some roll paper, and close the top cover.

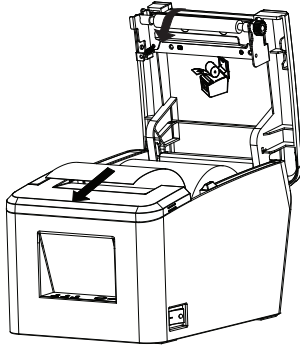


4. Tear the extra paper of the printer.

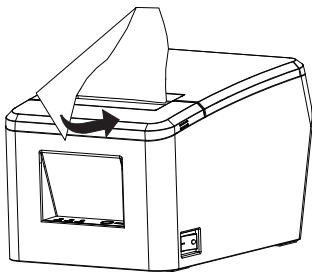


## Power Supply

 1. Make sure the printer power is turned off.
2. Connect power adapter with printer.
3. Connect power adapter with power cord.
4. Plug the other side of power cord into the socket outlet.



1

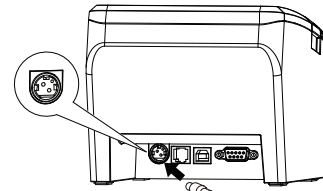

2

Power Adapter

3





4

Power Cord

## Interface



1

2

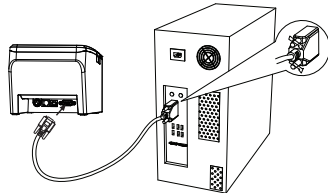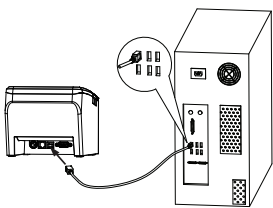



3

4

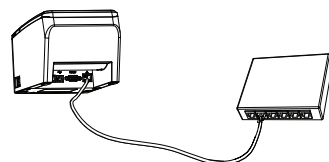
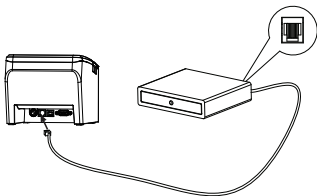


## Troubleshooting For Cutter Jam

1. When cutter jam occurs, do not press the cover open button to avoid damaging the blade.
2. Fix the printer by one hand and press either side of the convex bars by the other hand. Push up and open the front cover.

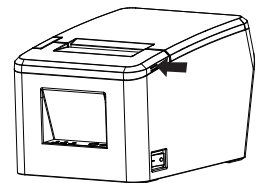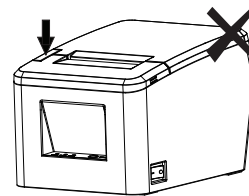


3. Please rotate the gear until the blade returns to its normal position, as shown in Figure 2.

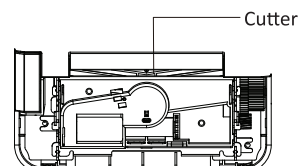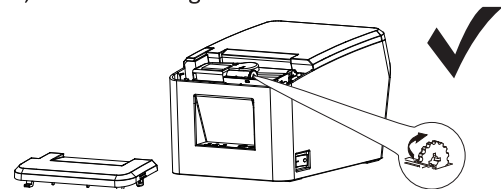

When cutter jam occurs, the cutter does not retreat back and can be seen.

Figure 1

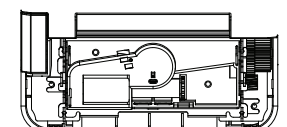

Cutter retreats back totally and cannot be seen.

Figure 2