

User Manual



Wireless Washable Mouse

* Please read this user manual carefully before you start using this product.

Europe - EU Declaration of Conformity

The product is conformity with all the essential requirements and other provisions of the European Council Directive: Directive 2014/53/EU on Radio Equipment and

Disposal of waste equipment by user in private household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.

Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural

resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

 








Interface introduction



Specifications

Working Methods: Optical mouse 115 x 62 x 36 mm Dimensions: Net weight: 90Gs DPI Maximum: 110Gs Connection: RF 2.4GHz Working distance: Abt 10m Input voltage: 1.5V 1pcs x AA Power: Splash, water, and dust resistant : Rated IP68(max) Kev Life: 5 million Keystroke Operating temperature 0°C to +45 °C -10°C to +60°C Storage temperature:

Antimicrobial

Mouse with antimicrobial protection is formulated to suppress the growth of odour and stain-causing microorganisms, and is not intended for use as a replacement to proper hygiene or for prevention of infectious illness.

General Cleaning Instructions

Spray-Wipe-Spray Method

- 1. Check whether the battery sealing screw cap is tightened to prevent liquid immersion and damage to the product during cleaning.
- 2. To avoid accidental keystrokes, entering or deleting important data, unplug the USB adapter from the device, before cleaning.
- 3. Clean the surface of the item by wiping, gently brushing, dipping it or by following the "spray-wipe-spray" protocol outlined as follows. Spray the product with disinfecting spray, wipe away dirt and organic solids with a cloth then spray the product completely again with disinfecting spray, allowing the disinfectant to remain on the product for at least five seconds.
- 4. Either wipe with dry cloth or shake gently and allow to air dry.

- 1. Check whether the battery sealing screw cap is tightened to prevent liquid immersion and damage to the product during cleaning
- 2. To avoid accidental keystrokes, entering or deleting important data, unplug the USB adapter from the device, before cleaning.
- 3. Soak and flush the mouse with approved cleaning agents and disinfectants.
- / Water temperature should be less than 50° C (120° F) and water should not be deeper than 50 cm.
- / Don't use abrasives.
- / Recommended cleaning materials: dish washing liquid, non-abrasive cleanser, general purpose cleaner, disinfectant, soap water, rubbing alcohol / surgical spirit.
- 4. Rinse thoroughly to remove any residual cleaning agent.
- 5. Drying the mouse.
- / Shake the mouse to remove any residual water.
- / Dry off with a clean towel.
- / Do not use a hot-air drier.
- / To extend mouse life: Recommended to air dry overnight (about 8 hours).
- / Reconnect the mouse.

♠ WARNING: The USB adapter is not washable